

NXS10-1233-S1D

SFP+ 10GBASE-BX-U 1270nm/1330nm 10km Singlemode

Features

- SFP+ Form Factor
- 10 Gb/s bitrate
- Up to 10 km over Singlemode
- LC connector
- Tx1270/Rx1330nm, DFB laser, PIN photodiode
- Up to 1 W power consumption
- +0/+70°C temperature range
- Built in digital diagnostic monitoring



Applications

- 10GBase-BX Ethernet
- Access, Metro and Enterprise
- 8x/10x Fibre Channel

Optical specifications



Optical budget EOL : 7 dB


Transmitter Receiver optical Specifications

Parameter	Min	Max	Unit
Tx Power	-7	1	dBm
Rx Sensitivity	-14		dBm

Electrical Environmental Specifications

Parameter	Value	Unit
Power supply voltage	3.3	V
Power supply current	300	mA
MTBF	2000000	hrs
Relative humidity	5~85	%

Transceiver electrical pad layout

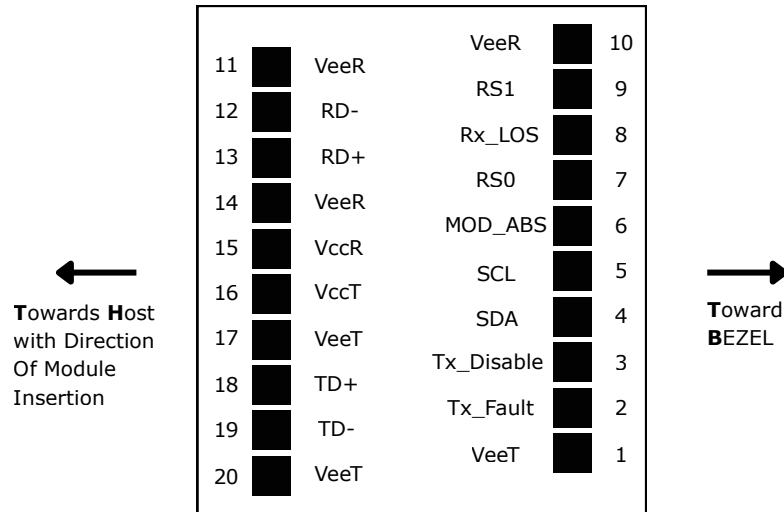

Module electrical PIN definition

SFP+ - SFF 8431

Pin	Symbol	Description	Note
1	VeeT	Transmitter Ground (Common with Receiver Ground)	1
2	Tx_Fault	Transmitter Fault.	2
3	Tx_Disable	Transmitter Disable. Laser output disabled on high or open.	3
4	SDA	2-wire Serial Interface Data Line	4
5	SCL	2-wire Serial Interface Clock Line	4
6	MOD_ABS	Module Absent. Grounded within the module	4
7	RS0	Rate Select 0	5
8	Rx_LOS	Loss of Signal indication. Logic 0 indicates normal operation.	6
9	RS1	No connection required	1
10	VeeR	Receiver Ground (Common with Transmitter Ground)	1
11	VeeR	Receiver Ground (Common with Transmitter Ground)	1
12	RD-	Receiver Inverted DATA out. AC Coupled	
13	RD+	Receiver Non-inverted DATA out. AC Coupled	
14	VeeR	Receiver Ground (Common with Transmitter Ground)	1
15	VccR	Receiver Power Supply	
16	VccT	Transmitter Power Supply	
17	VeeT	Transmitter Ground (Common with Receiver Ground)	1
18	TD+	Transmitter Non-Inverted DATA in. AC Coupled.	
19	TD-	Transmitter Inverted DATA in. AC Coupled.	
20	VeeT	Transmitter Ground (Common with Receiver Ground)	1

Note

1. Circuit ground is internally isolated from chassis ground.
2. Tx_Fault is an open collector/drain output, which should be pulled up with a 4.7k Ω – 10k Ω resistor on the host board if intended for use. Pull up voltage should be between 2.0V to Vcc + 0.3V. A high output indicates a transmitter fault caused by either the TX bias current or the TX output power exceeding the preset alarm threshold. A low output indicates normal operation. In the low state, the output is pulled to <0.8V.
3. Laser output disabled on Tx_Disable >2.0V or open, enabled on Tx_Disable <0.8V.
4. Should be pulled up with 4.7k Ω - 10k Ω host board to a voltage between 2.0V and 3.6V. MOD_ABS pulls line low to indicate module is plugged in.
5. Internally pulled down per SFF-8431 Rev 4.1.
6. LOS is open collector output. It should be pulled up with 4.7k Ω – 10k Ω on host board to a voltage between 2.0V and 3.6V. Logic 0 indicates normal operation; logic 1 indicates loss of signal.